







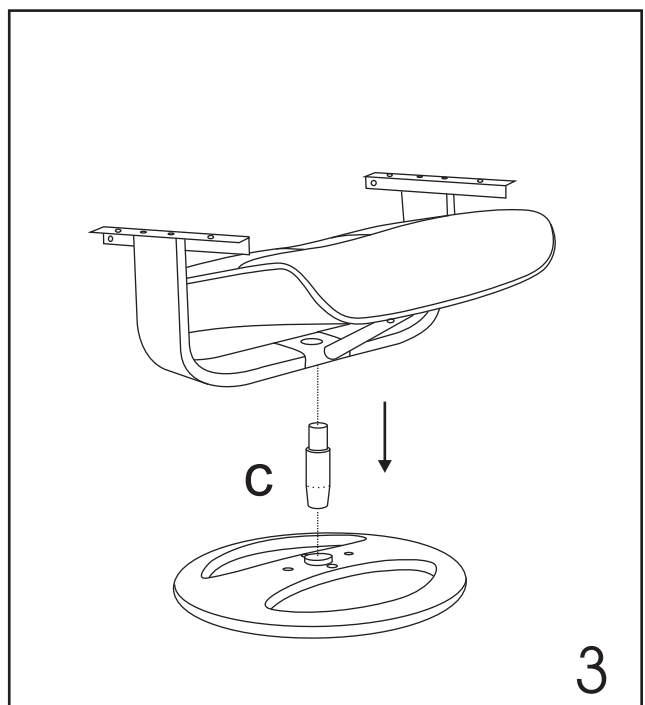

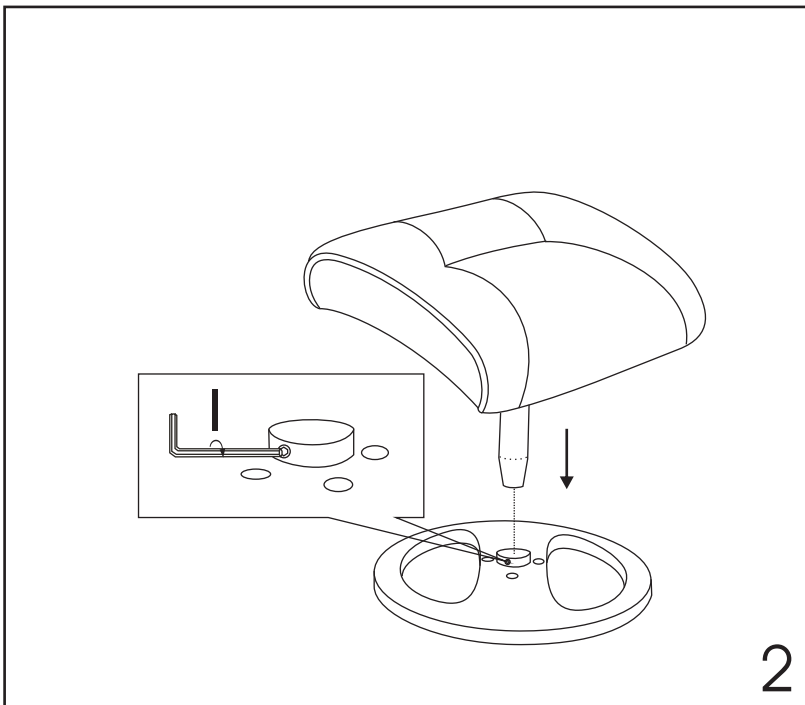


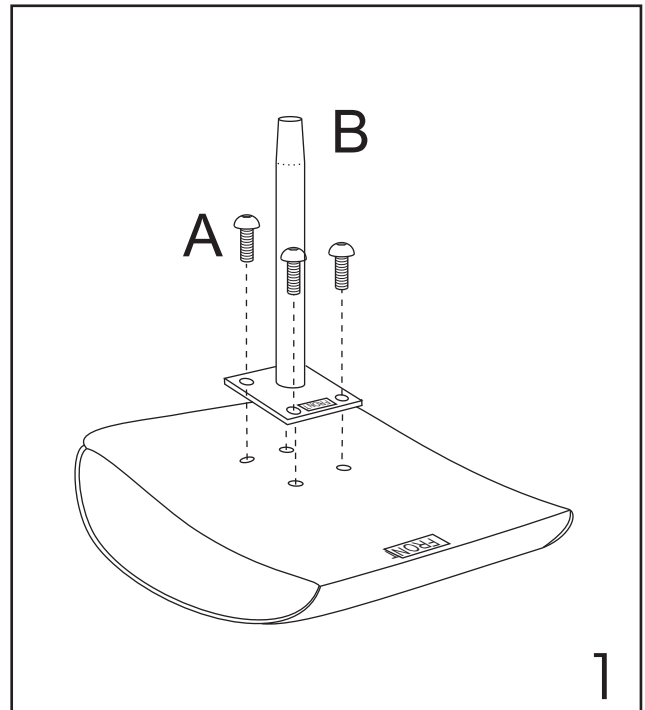


7249F

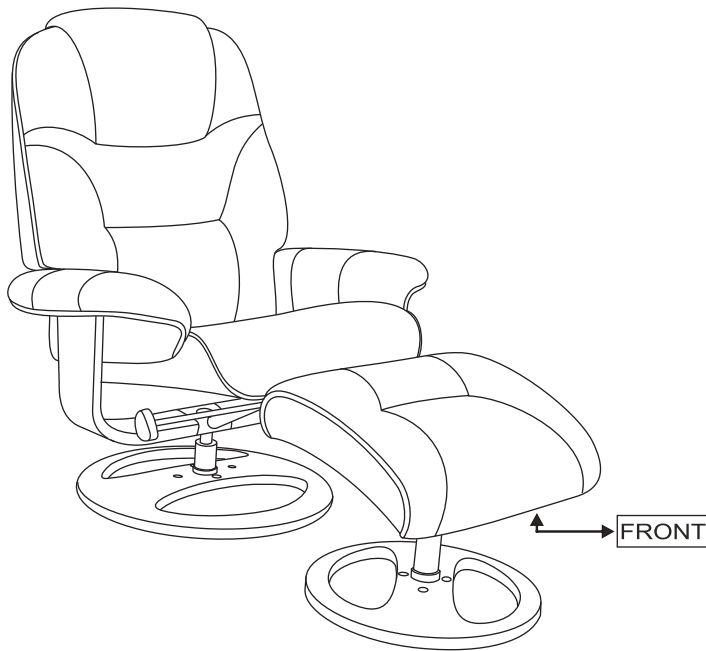


DURING ASSEMBLY CHECK AND TIGHTEN ALL BOLTS


A	 M6X20	8PCS	D		2PCS	G		1PC
B		1PC	E	 M8X35	2PCS	H		1PC
C		1PC	F		1PC	I		1PC

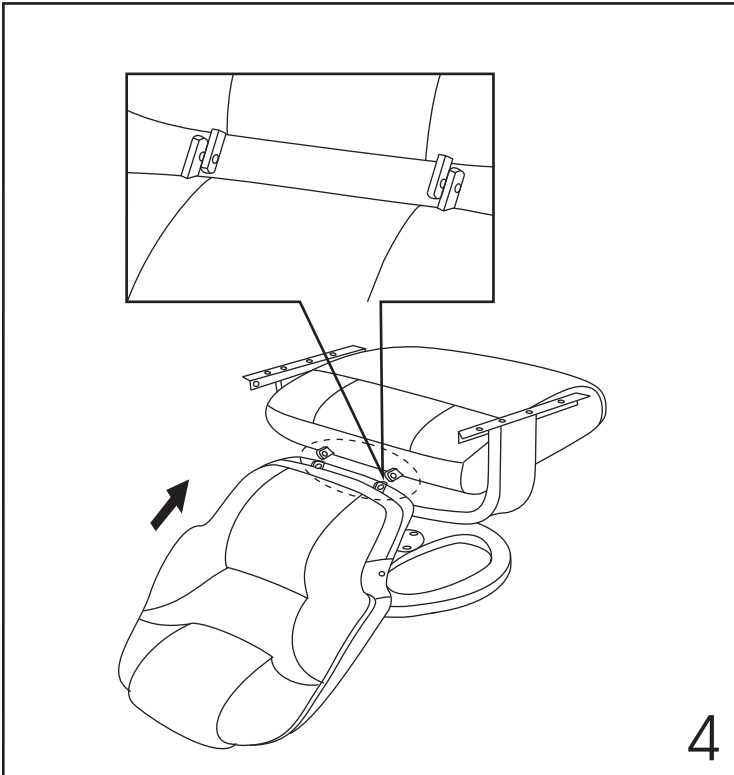


4

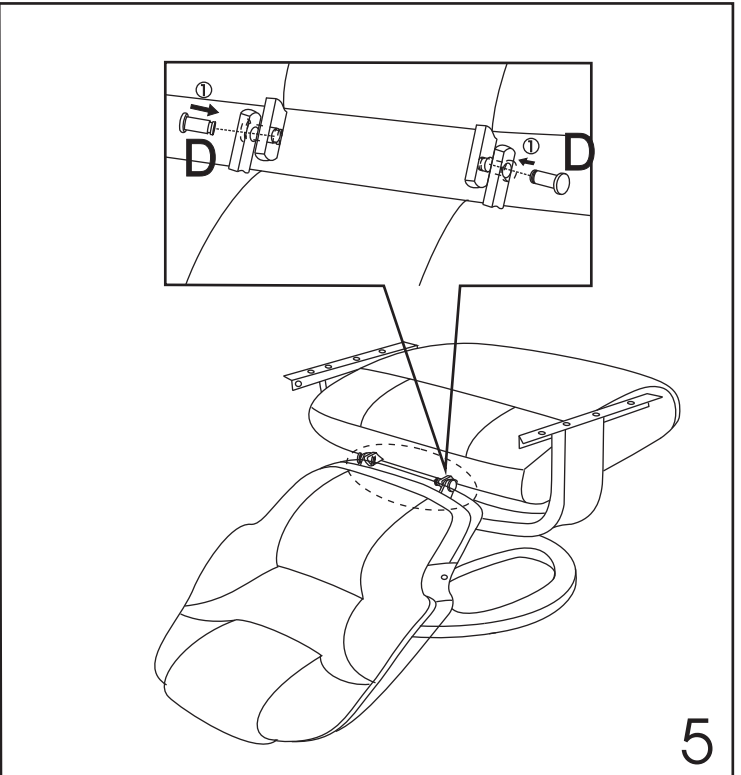


5

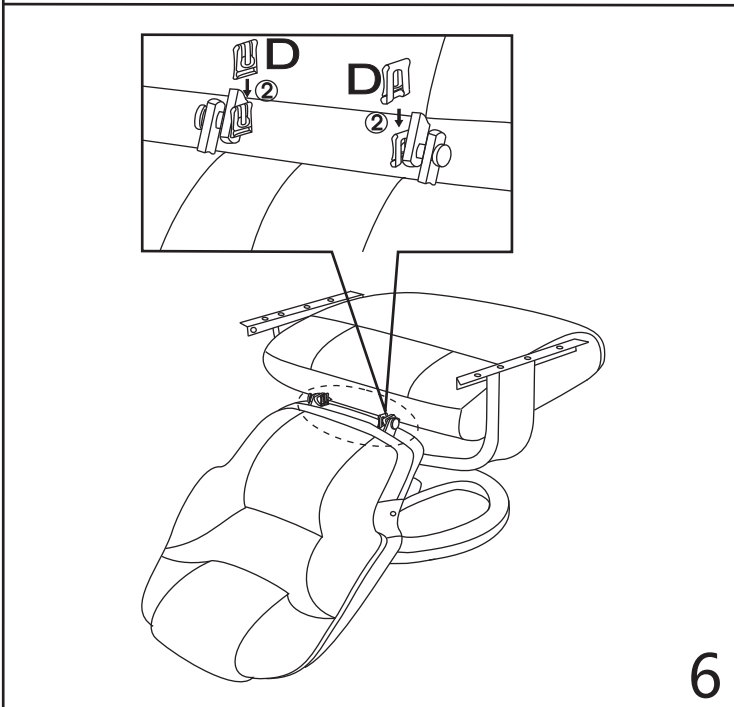


6

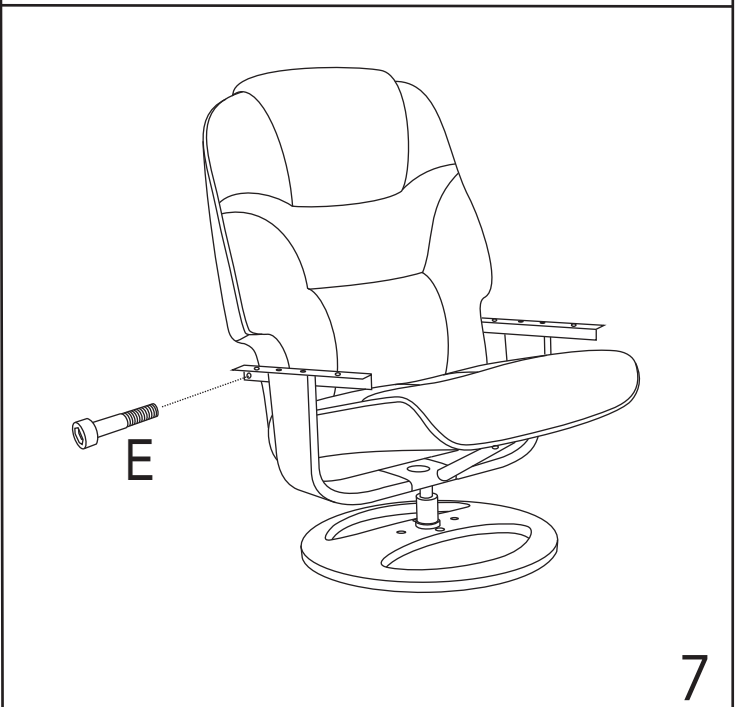

7

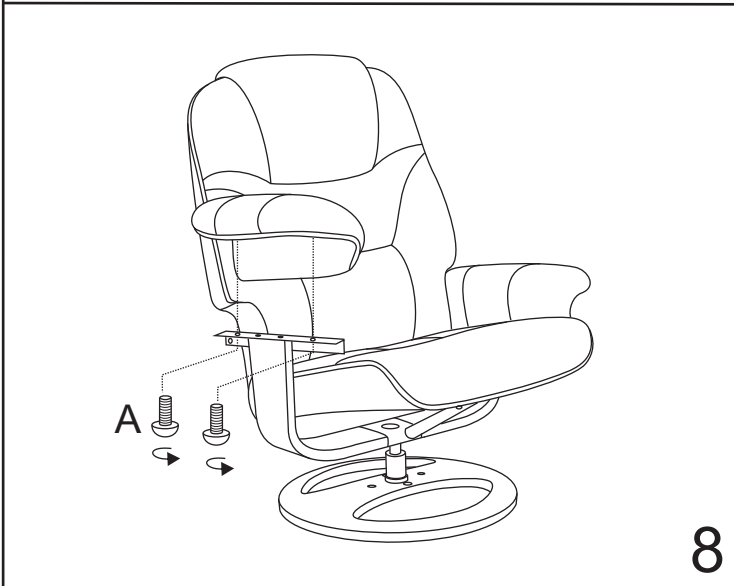

8

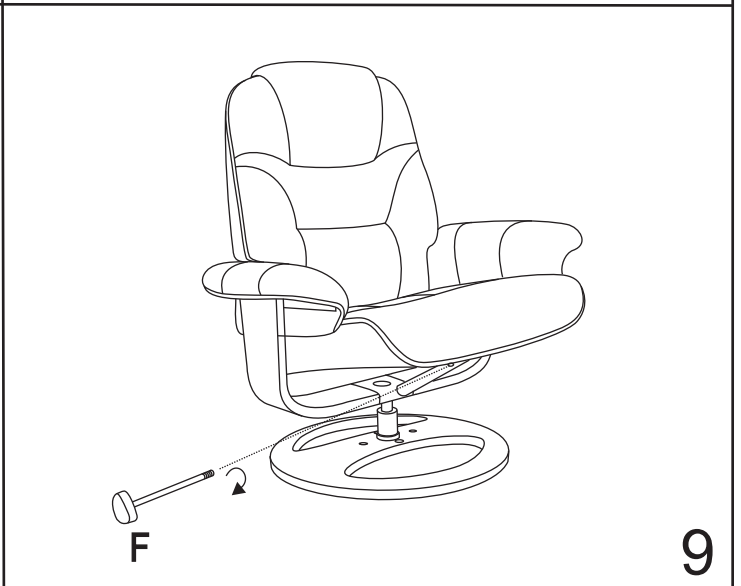

9