


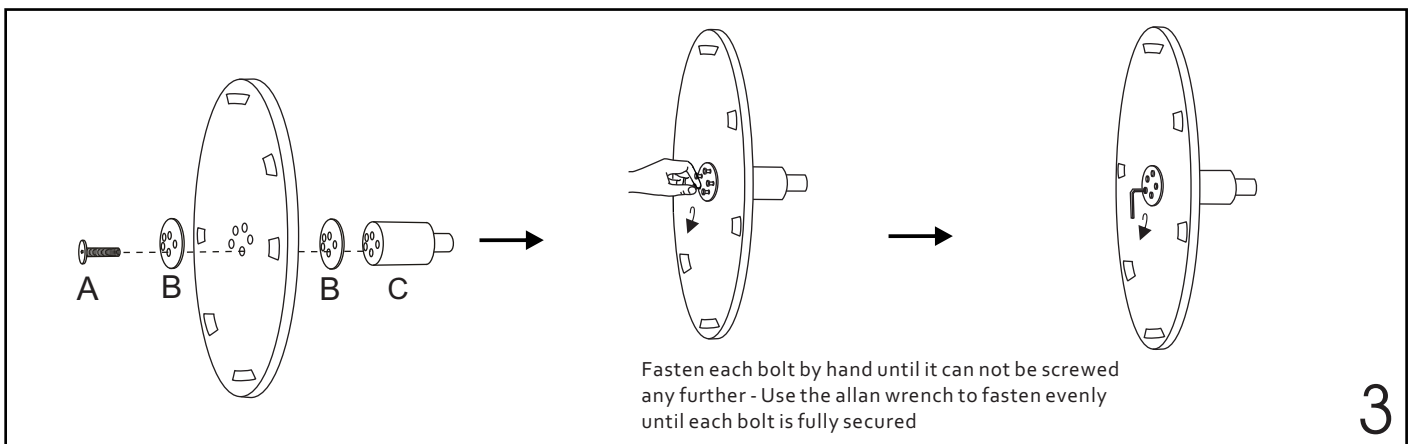


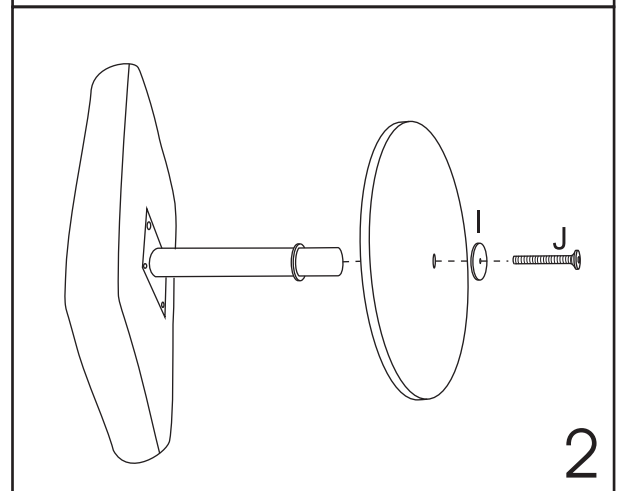






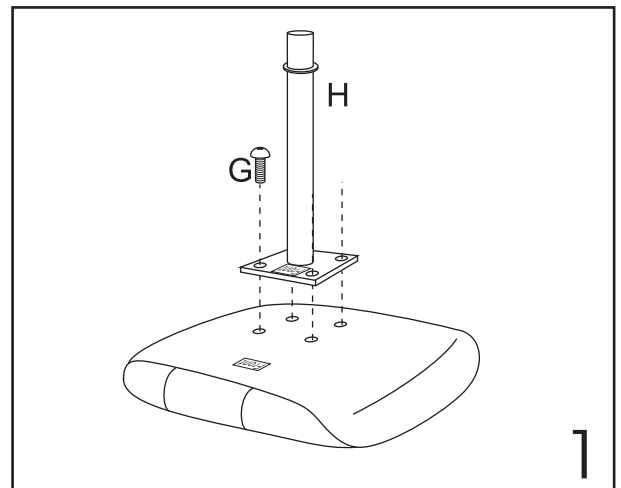

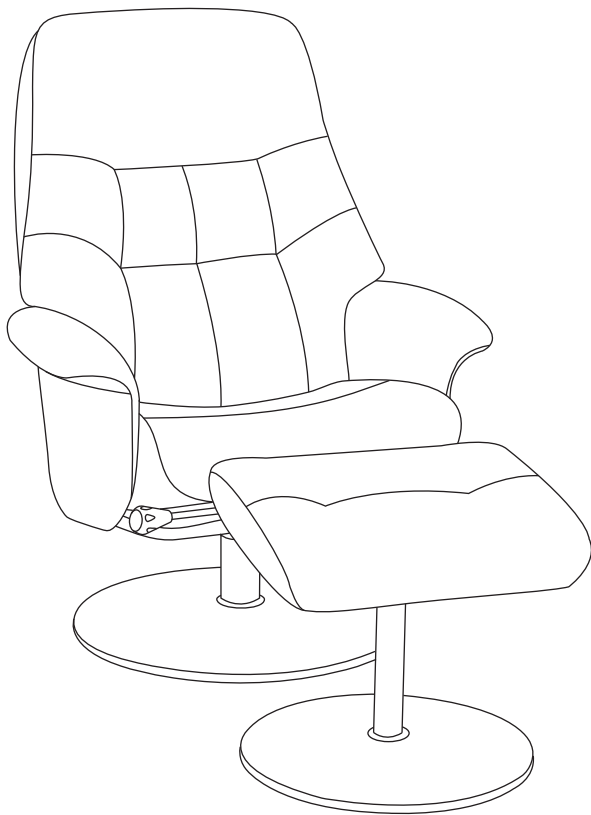


S7667




Fasten each bolt by hand until it can not be screwed any further - Use the allen wrench to fasten evenly until each bolt is fully secured


A	 M8X50	5PCS	E	 M6X20	6PCS	I		1PC
B		2PCS	F		1PC	J	 M6X45	1PC
C		1PC	G	 M6X20	4PCS	K		1SET
D	 M8X35	3PCS	H		1PC			

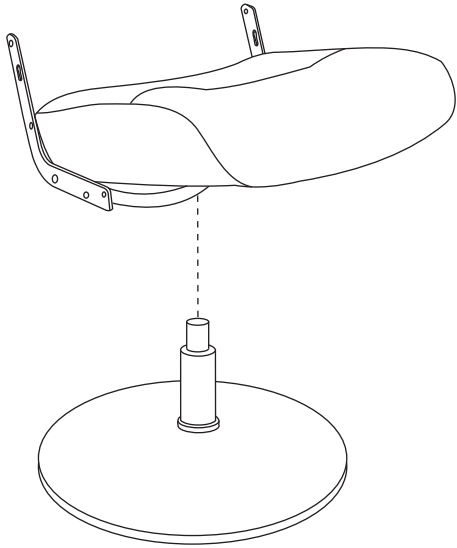


4

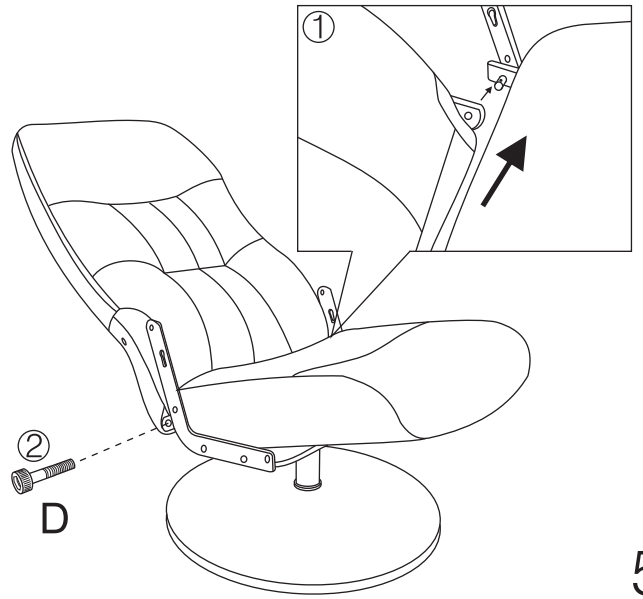


5

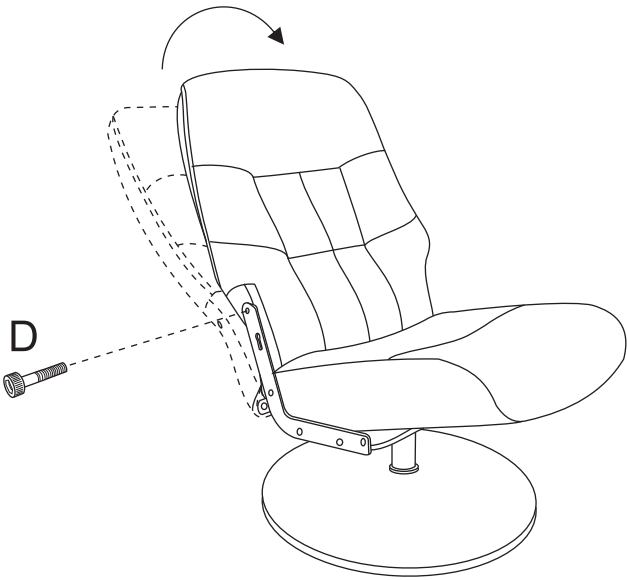

6

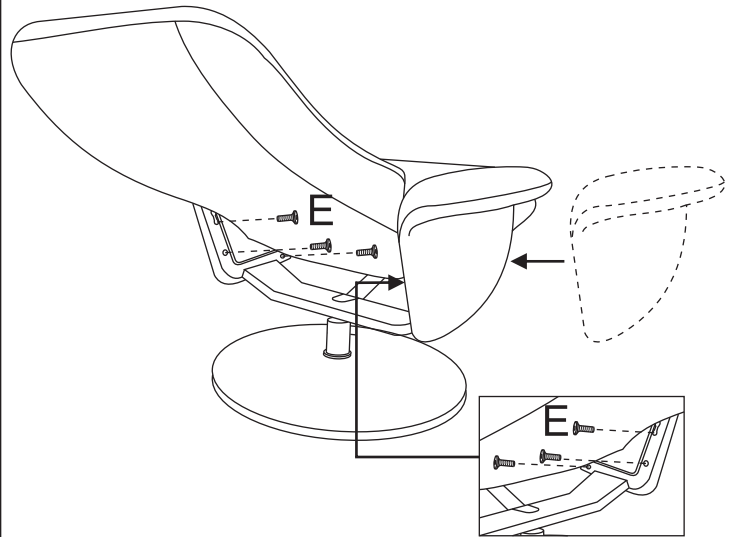

7

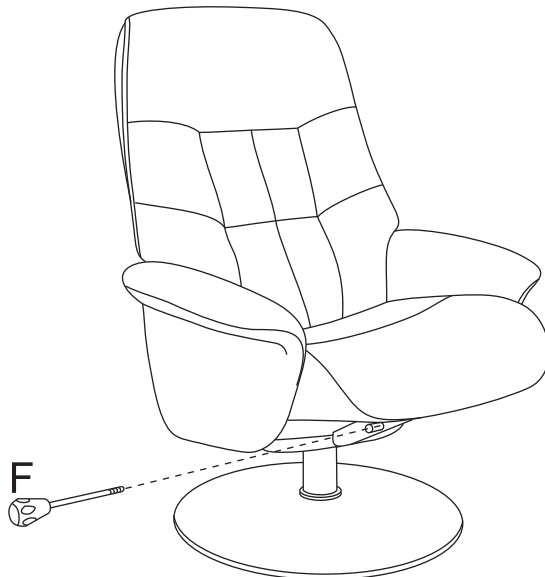

8